Hikvision NVR add onvif protocol camera method

a. If your NVR supports POE input, you can directly insert the camera to the NVR POE network port without additional connection Power,

b. If NVR does not support POE and USE POE switch, you can connect to the camera to POE switch,

c. If you do not have a POE switch, and NVR does not support POE input, you can connect Camera NVR to the same network router, and then the camera is connected to DC12V Power

Add camera steps

1. Enter Hikvision NVR menu -click the camera



## 2. Click Camera-ip Camera, and then click Refresh

		Camera	a Management					
🗉 Camera 💦 🔹	IP Camera IP Car	nera Import/Export						
	Show Password of IP Camera							
# OSD	Camer Add/D	elete Status Sec	urity IP Car	mera Addr Edit	Upgr Camera Na	ame Protocol		
😔 Image								
= PTZ								
1 Motion				TEC	CHLOGICS			
🖾 Privacy Mask								
₩ Video Tampering								
Video Loss								
E VCA	<	1 1 1				>		
	Refresh	One-touch Activ	Upgrade	Delete	One-touch Adding	Custom Adding		
	Enable H.265 (For	Initial Access)		<b>Z</b>				
CAMERA	-> IP CAME	RA						
						1		



3. After clicking Refresh, wait a little, camera IP address and other information add at the NVR system. Click make the NVR display the image.

			Ca	mera Managem	ent						
🗉 Camera 🔷 🔸	IP Camera	IP Camera	Import/Export								
	Show Pa	assword of IP	Camera								
⊌ OSD	Camer	Add/Delete	Status	Security	IP Came	era Addr.	Edit	Upgr	Camera N	ame Proto	col
😔 Image		•		Active	192.168	3.1.199				ONVI	F
<b>– р</b> т7						ĸ					
0 -12							TEC		ore		
🛬 Motion			X				IEC		JUICS		
🖾 Privacy Mask											
👋 Video Tampering											
Video Loss											
🤄 VCA	<		1 1	1							>
	Refr	resh Or	ne-touch Activ	Upgrad	e	Delet	e	One-tou	ich Adding	Custom Addi	ing
	Enable H.	265 (For Initia	al Access)								

4. Now NVR has a yellow exclamation mark protocol and use the name and the password

and cannot display images. You need to modify the camera

				Camera Manageme	ent					
🖙 Camera 🔷 >	IP Camera	IP Camera	Import/Ex	port						
≓ osp	Show Pa	ssword of IP	Camera							
5 005	Camer	Add/Delete	Status	Security	IP Camera Addr	. Edit	Upgr	. Camera Na	ame Protoco	ol
😔 Image	D1			Risk Password	192.168.1.199	2		IPCamera	01 ONVIF	
o PTZ										
★ Motion						ГЕС	HL(	)GICS		
Ø Privacy Mask										
E Filvacy Mask		1		Attention						
🕊 Video Tampering		Th	e user na	me or the password	is wrong.					
Video Loss				OK						
€ VCA	<									>
	Refr	esh Or	ne-touch /	Activ Upgrade	e Delet	e	One-tou	uch Adding	Custom Addin	ng
	Enable H.:	265 (For Initia	al Access)	)						
										1000
										NO

## 5 . Click Edit

			(	Camera Manageme	nt					
🛥 Camera 🔷 🔸	IP Camera	IP Camera	Import/Expo	ort						
rt ocp	Show Pa	ssword of IP	Camera							
B 050	Camer	Add/Delete	Status	Security	IP Camera	Addr Edit	Upgr Camera N	ame Protocol		
😔 Image		1	4	Risk Password	192.168.1.	199 🔀	- IPCamera	01 ONVIF		
S PTZ										
1 Motion						TEC	HLOGICS			
🖾 Privacy Mask										
🕊 Video Tampering										
Video Loss										
E VCA	<		1 1	1				>		
	Refr	əsh Or	e-touch Ac	tiv Upgrade	e l	Delete	One-touch Adding	Custom Adding		
	Enable H.265 (For Initial Access)									

## 6 . Protocol Choose ONVIF,,, User Name : admin ,Password: 123456 , click OK

	Edit IP Camera	
IP Camera No.	D1	
IP Camera Address	192.168.1.199	
Protocol	ONVIF	TECHIOCI
Management Port	80	IECHLUGI
Channel Port	1	•
Transfer Protocol	Auto	~
User Name	admin	
Password	*****	
	Protocol OK	Cancel



## , Now can display the image in the NVR system



8.

